


Bosch Climate 5000 Series **Wall Mounted Indoor Unit**

BMS500-AAU024-1AHWXB | BMS500-AAS030-1AHWXB | BMS500-AAS036-1AHWXB

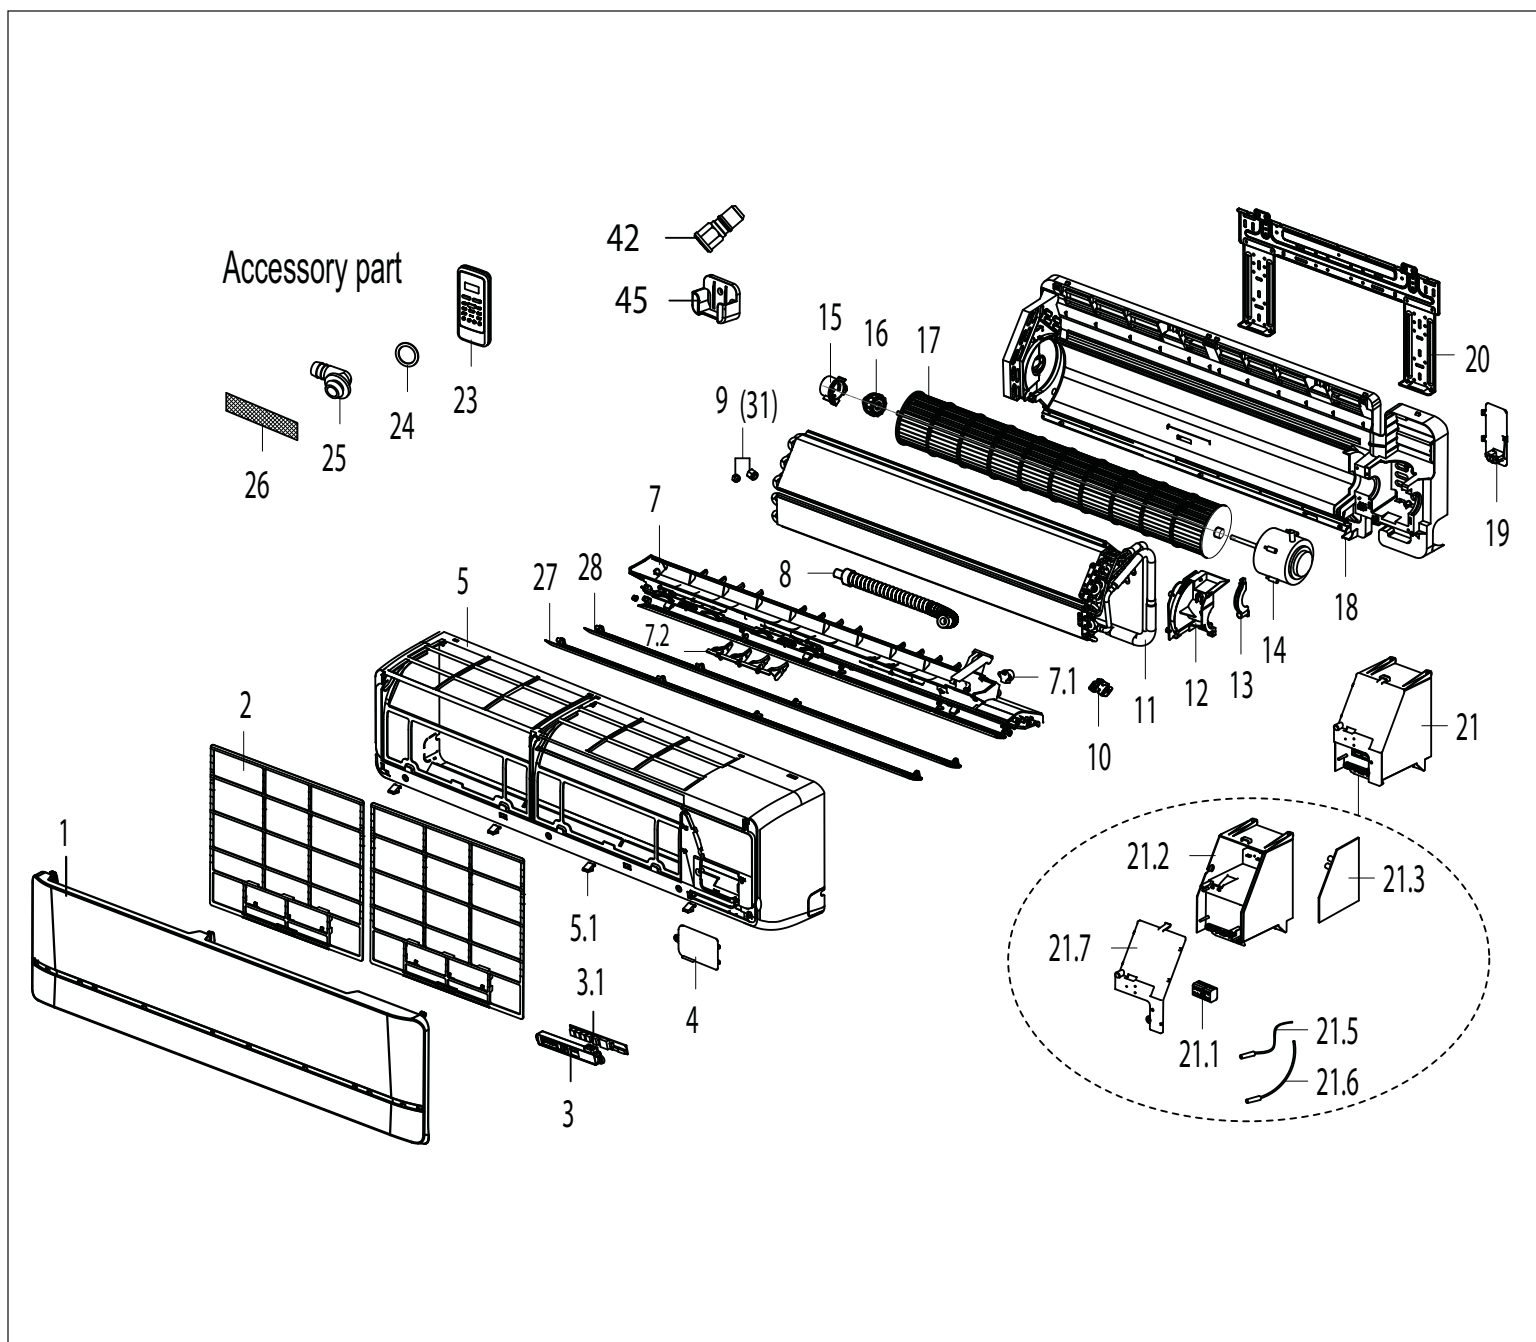

Pos.	Description	Qty	BMS500-AAU024-1AHWXB	BMS500-AAS030-1AHWXB	BMS500-AAS036-1AHWXB	Recommended Stocking	Remarks
1	Front panel	1.0	8-733-953-774	8-733-953-774	8-733-953-774		
2	Air filter	2.0	8-733-953-775	8-733-953-775	8-733-953-775	✓	
3	Display box	1.0	8-733-953-716	8-733-953-716	8-733-953-716	✓	
3.1	Display board	1.0	8-733-953-717	8-733-953-717	8-733-953-717		
4	Electrical cover	1.0	8-733-953-718	8-733-953-718	8-733-953-718		
5	Cabinet	1.0	8-733-953-776	8-733-953-776	8-733-953-776		
5.1	Screw cap	4.0	8-733-953-720	8-733-953-720	8-733-953-720		
7	Supply air vent	1.0	8-733-953-777	8-733-953-777	8-733-953-777		
7.1	Stepper motor	1.0	8-733-953-778	8-733-953-778	8-733-953-778	✓	
7.2	Air diverters	3.0	8-733-953-758	8-733-953-758	8-733-953-758		
8	Drain hose	1.0	8-733-953-759	8-733-953-759	8-733-953-759		
9	Copper nut	1.0	8-733-953-585	8-733-953-585	8-733-953-585		
9	Copper nut	1.0	8-733-953-586	8-733-953-586	8-733-953-586		
10	Temp sensor clamp	1.0	8-733-953-724	8-733-953-724	8-733-953-724		
11	Evaporator assembly	1.0	8-733-953-780	8-733-953-780	8-733-953-780		
12	Fan motor cover	1.0	8-733-953-781	8-733-953-781	8-733-953-781		
13	Fan motor bracket	1.0	8-733-953-762	8-733-953-762	8-733-953-762		
14	Brushless DC motor	1.0	8-733-953-782	8-733-953-782	8-733-953-782	✓	
15	Bearing	1.0	8-733-953-728	8-733-953-728	8-733-953-728		
16	Bearing base	1.0	7-738-5-533	7-738-005-533	7-738-005-533		
17	Blower wheel	1.0	8-733-953-783	8-733-953-783	8-733-953-783	✓	
18	Chassis assembly	1.0	8-733-953-784	8-733-953-784	8-733-953-784		
19	Pipe cover	1.0	8-733-953-785	8-733-953-785	8-733-953-785		
20	Mounting plate	1.0	8-733-953-786	8-733-953-786	8-733-953-786		
21	Electronic control box assembly	1.0	8-733-954-277	8-733-953-794	8-733-953-787		
21.1	Terminal block	1.0	8-733-953-740	8-733-953-740	8-733-953-740		
21.2	ECB box	1.0	8-733-953-788	8-733-953-788	8-733-953-788		
21.3	Main control board	1.0	8-733-954-278	8-733-953-795	8-733-953-789	✓	
21.5	Room temperature sensor	1.0	8-733-953-738	8-733-953-738	8-733-953-738	✓	
21.6	Pipe temperature sensor	1.0	8-733-953-739	8-733-953-739	8-733-953-739	✓	
21.7	ECB cover	1.0	8-733-953-790	8-733-953-790	8-733-953-790		
23	Remote controller	1.0	8-733-953-578	8-733-953-578	8-733-953-578	✓	
24	Seal ring	1.0	7-738-5-549	7-738-005-549	7-738-005-549		
25	Drain hose	1.0	7-738-5-550	7-738-005-550	7-738-005-550		
26	Air freshening filter	1.0	7-738-5-555	7-738-005-555	7-738-005-555		
27	Louver	1.0	8-733-953-791	8-733-953-791	8-733-953-791	✓	
28	Louver	1.0	8-733-953-792	8-733-953-792	8-733-953-792	✓	
42	Check valve	1.0	8-733-953-651	8-733-953-651	8-733-953-651	✓	
45	Remote Controller Holder	1.0	7-738-006-407	7-738-006-407	7-738-006-407		
BMS500-AAU024-1AHWXB BMS500-AAS030-1AHWXB BMS500-AAS036-1AHWXB							