


Bosch Climate 5000 Series **Wall Mounted Indoor Unit**

BMS500-AAS012-0AHWXB | BMS500-AAU009-1AHWXB | BMS500-AAU012-1AHWXB

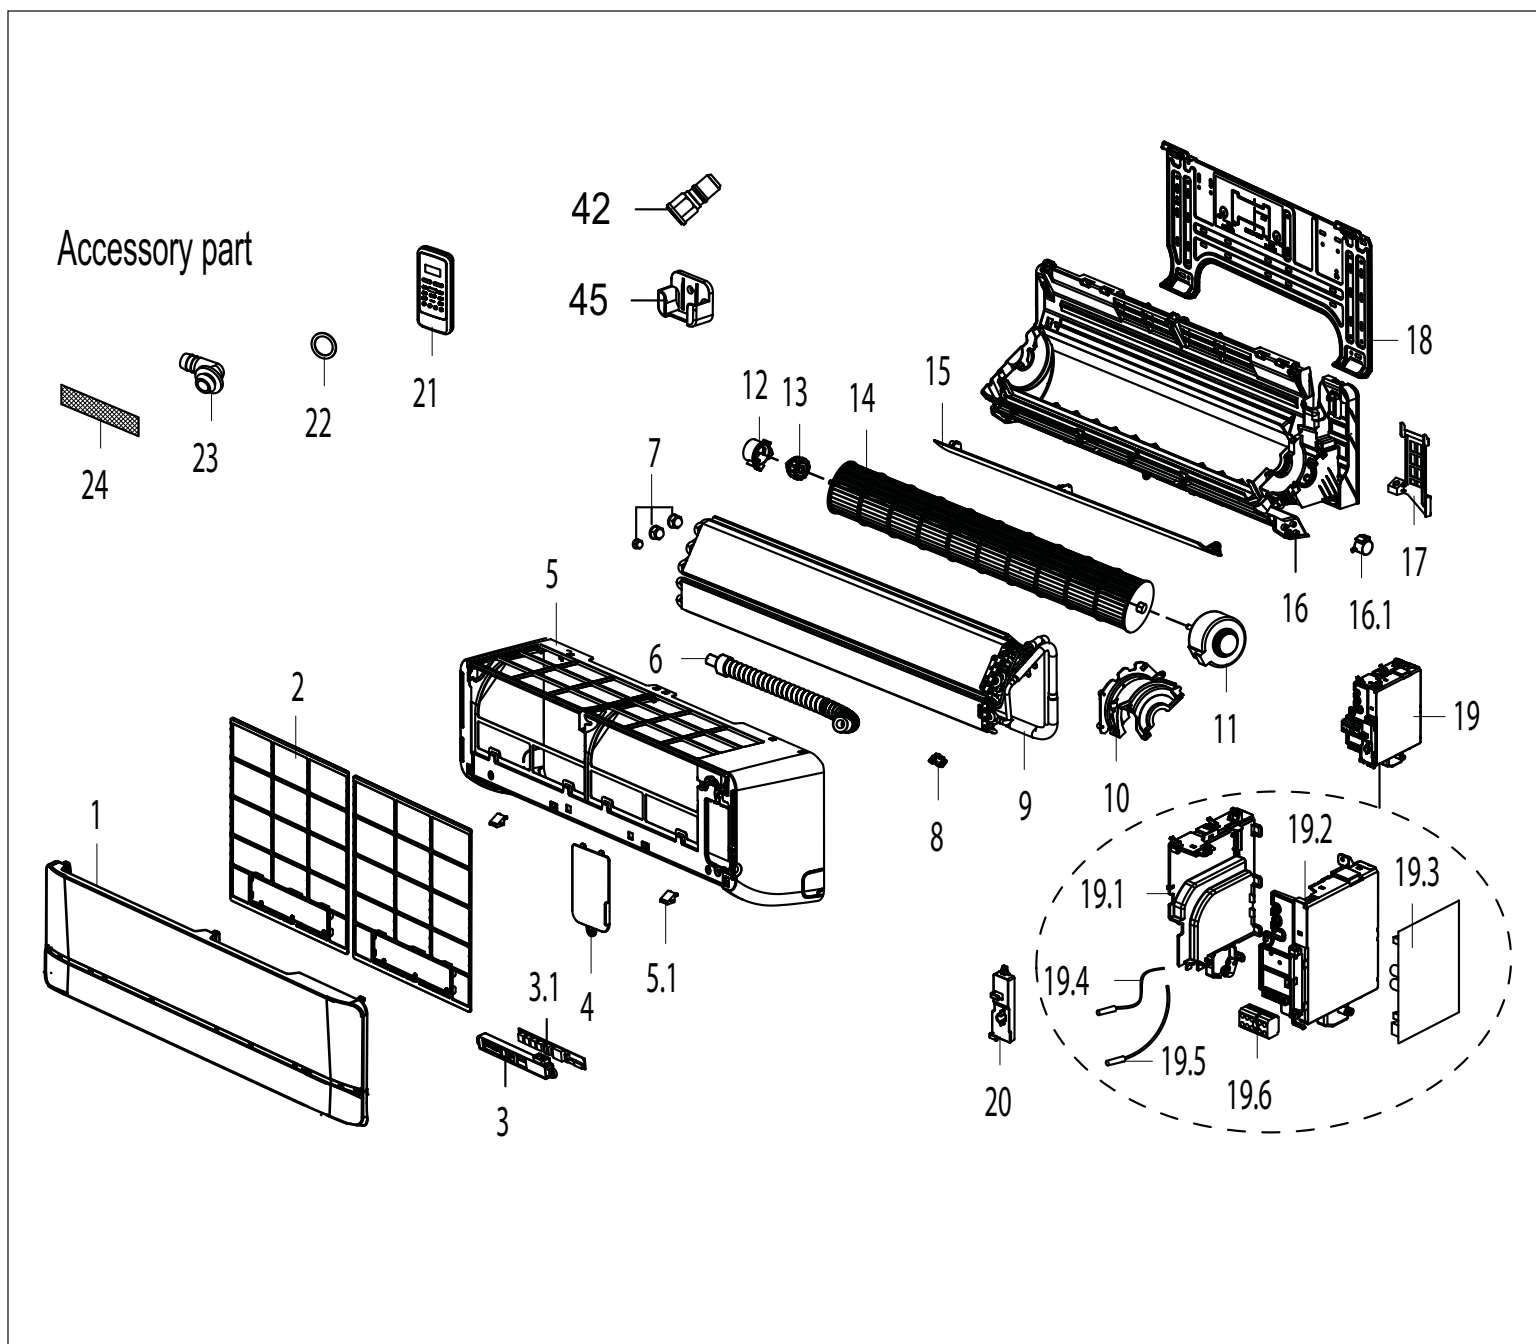

BOSCH

Pos.	Description	Qty	BMS500-AAS012- 0AHWXB	BMS500-AAU009- 1AHWXB	BMS500-AAU012- 1AHWXB	Recommended Stock	Remarks
1	Front panel	1.0	8-733-953-714	8-733-953-714	8-733-953-714		
2	Air filter	2.0	8-733-953-715	8-733-953-715	8-733-953-715	✓	
3	Display box	1.0	8-733-953-716	8-733-953-716	8-733-953-716	✓	
3.1	Display board	1.0	8-733-953-717	8-733-953-717	8-733-953-717		
4	Electrical cover	1.0	8-733-953-718	8-733-953-718	8-733-953-718		
5	Cabinet	1.0	8-733-953-719	8-733-953-719	8-733-953-719		
5.1	Screw cap	2.0	8-733-953-720	8-733-953-720	8-733-953-720		
6	Drain hose	1.0	7-738-005-554	7-738-005-554	7-738-005-554		
7	Pipe nut	1.0	8-733-953-746	8-733-953-721	8-733-953-746		
7	Copper nut	1.0	8-733-953-644	8-733-953-586	8-733-953-644		
7	Copper nut	1.0	8-733-953-636	8-733-953-636	8-733-953-636		
8	Temp sensor clamp	1.0	8-733-953-724	8-733-953-724	8-733-953-724		
9	Evaporator assembly	1.0	8-733-953-748	8-733-953-725	8-733-953-748		
10	Fan motor cover	1.0	8-733-953-726	8-733-953-726	8-733-953-726		
11	Brushless DC Motor	1.0	7-738-005-531	8-733-953-727	8-733-953-727	✓	
12	Bearing	1.0	8-733-953-728	8-733-953-728	8-733-953-728		
13	Bearing base	1.0	7-738-005-533	7-738-005-533	7-738-005-533		
14	Cross flow fan	1.0	8-733-953-729	8-733-953-729	8-733-953-729	✓	
15	Louver	1.0	8-733-953-730	8-733-953-730	8-733-953-730	✓	
16	Chassis assembly	1.0	8-733-953-731	8-733-953-731	8-733-953-731		
16.1	Stepper motor	1.0	7-738-005-538	7-738-005-538	7-738-005-538	✓	
17	Pipe cover	1.0	8-733-953-732	8-733-953-732	8-733-953-732		
18	Mounting plate	1.0	8-733-953-733	8-733-953-733	8-733-953-733		
19	Electronic control box assembly	1.0	8-733-953-796	8-733-953-734	8-733-953-749		
19.1	ECB Left cover	1.0	8-733-953-735	8-733-953-735	8-733-953-735		
19.2	ECB Right cover	1.0	8-733-953-736	8-733-953-736	8-733-953-736		
19.3	Main control board	1.0	8-733-953-797	8-733-953-737	8-733-953-750	✓	
19.4	Room temperature sensor	1.0	8-733-953-738	8-733-953-738	8-733-953-738	✓	
19.5	Pipe temperature sensor	1.0	8-733-953-739	8-733-953-739	8-733-953-739	✓	
19.6	Terminal block	1.0	8-733-953-740	8-733-953-740	8-733-953-740		
20	ECB Cover	1.0	8-733-953-742	8-733-953-742	8-733-953-742		
21	Remote controller	1.0	8-733-953-578	8-733-953-578	8-733-953-578	✓	
22	Seal ring	1.0	7-738-005-549	7-738-005-549	7-738-005-549		
23	Drain hose	1.0	7-738-005-550	7-738-005-550	7-738-005-550		
24	Air freshening filter	1.0	8-733-953-744	8-733-953-744	8-733-953-744		
42	Check valve	1.0	8-733-953-745	8-733-953-745	8-733-953-745	✓	
45	Remote Controller Holder	1.0	7-738-006-407	7-738-006-407	7-738-006-407		
BMS500-AAS012-0AHWXB BMS500-AAU009-1AHWXB BMS500-AAU012-1AHWXB							